

SUSPENSION MAXX

ADVANCED LEVELING SYSTEMS

INSTALLATION INSTRUCTIONS

MAXX SHACKLE

SMX - 15400 '04-'07 Colorado/Canyon 2WD and 4WD

SMX - 15408 '08-Current Colorado/Canyon 2WD and 4WD



INSTALL TIME: 1 HR.


1. Remove spare tire. Block front wheels.
2. Safely raise the rear of truck. Support with Load-Rated jack-stands under the frame.
- 3a. Install brake hose riser with with extended bolt. ('04-'07 Models)
- 3b. Install Brake Hose Bar for '08 to current models.
4. Raise and support rear axle lightly. Disconnect lower shock mounting bolts. See Fig.1
5. Remove shackle mounting bolts at rear of spring. See Fig. 2
6. Gently lower rear axle and remove OEM shackles.
7. Install **MAXX** Shackles to desired height. (3 holes positioned at the bottom)
8. Install but **DO NOT** tighten shackle mounting bolts.
9. Reconnect rear shocks. Tighten to 70 ft/lbs.
10. Lower the vehicle on ground.
11. Tighten shackle mounting bolts with 21mm wrench. Torque to 90 ft/lbs.



'04-'07 Models



'08 - Current

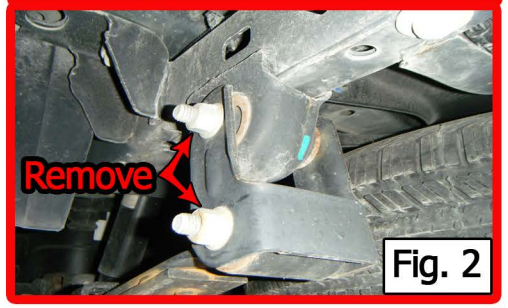

Remove

Fig. 2


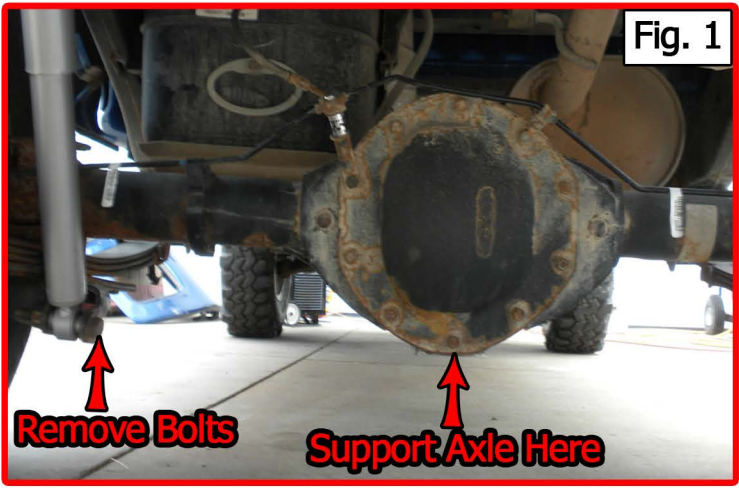


Fig. 1

Remove Bolts

Support Axle Here

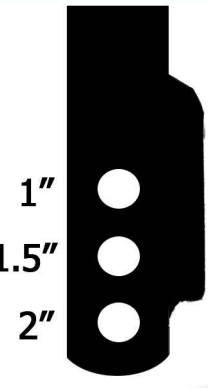

1"

1.5"

2"

Questions? E-mail us at tech@SuspensionMAXX.com
Or call 1.888.**MAXX**CAM. Visit us on the web at SuspensionMAXX.com



Again, thank you for your purchase! Enjoy your SuspensionMAXX leveling system!